


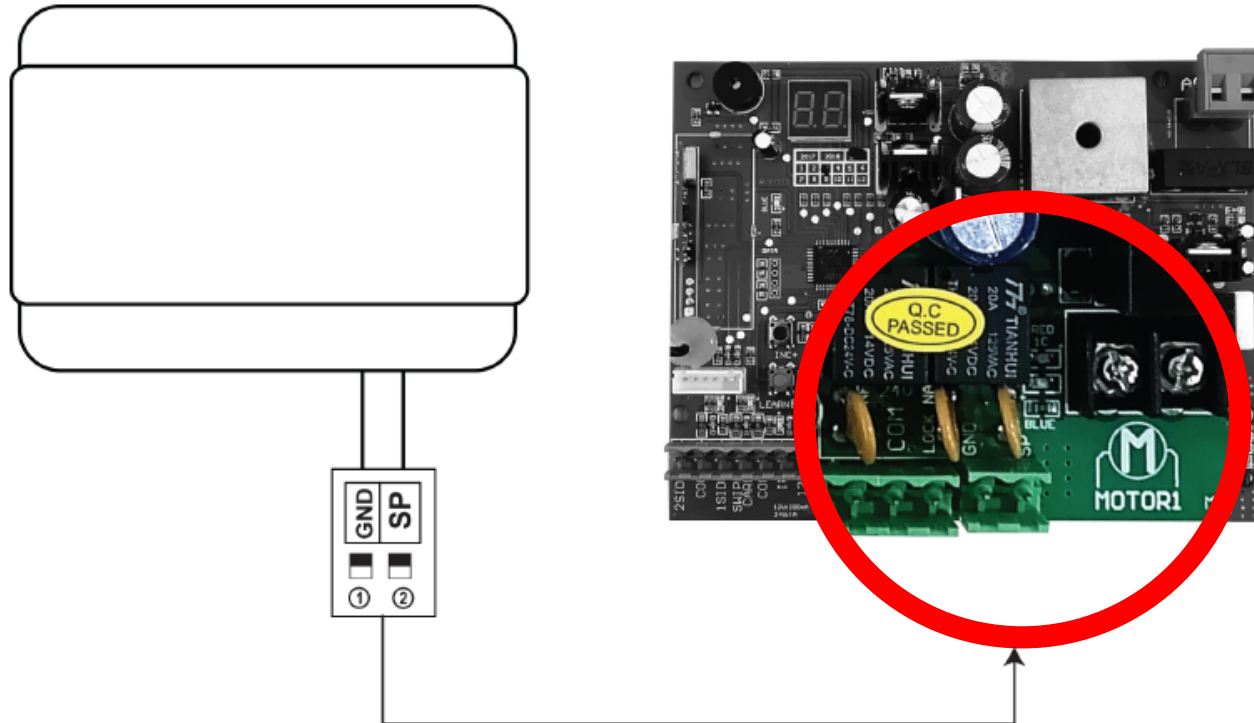


**FOR ALL SWING GATE OPENERS**

### HOW TO CONNECT A SERVICE DOOR LOCK ON EG-22A

All Swing Gate Openers (SW-01, SW-01A, SW-02, SW-02L, SW-02SL, SW-03, SW-03A, SW-03L, SW-04)

- 1.) Connect the flatcord wires to the **GND and SP** sockets in the **EG-22A** control board.
- 2.) Press the 3rd button for command in the remote control 



▲ EG-22A Control Board for Swing Gates with close-up view of wires-to-sockets connection.