

WA213

Electric Tailgate for TOYOTA RAV4 2013-2019 with Upper Latch
USER MANUAL



YOUR KEY TO AUTOMATION




Installation Precautions

- For safety and to ensure the normal use of the product, please install it by a professional installer. Do not disassemble the machine without permission to avoid damage to the machine and accident.
- Before installing the product, start the engine first, check the function display of the car dashboard, the operation of the buttons in the car is normal, and the surface of the car is not scratched. If you have any questions, please report to car owner in time.
- Check whether the tailgate opens and closed normally, check whether the lights are normal.
- Turn off the engine and prepare related tools.
- Installer should first remove the metal objects and other hard objects on their bodies to prevent damage to the car seat or interior during installation.
- During the installation process, the removed automobile components should be put away to avoid scratching the instrument panel in the car. Debris left in the wiring should be disposed of in time and not left in the car. The joint must be insulated to prevent short circuit.
- According to our wiring method, avoid affecting the moving parts of the car during the wiring process, such as the steering wheel drive shaft, accelerator and brake pedal and other vehicle control parts. Each wiring harness needs to be fixed after being routed to prevent it from coming loose.
- Please connect each wiring harness according to our wiring method (Noted the position of the ground wire).
- Do not insert or remove the connected plug while the power is on,

otherwise the host or accessories may be damaged during plugging and unplugging.



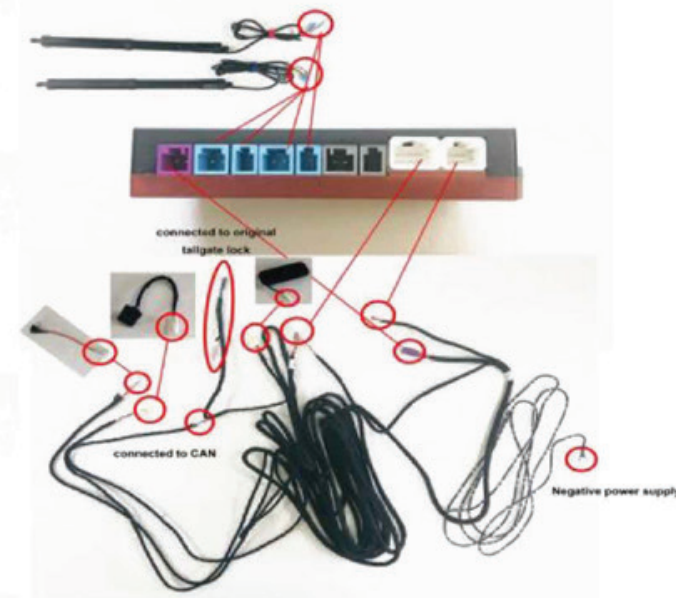


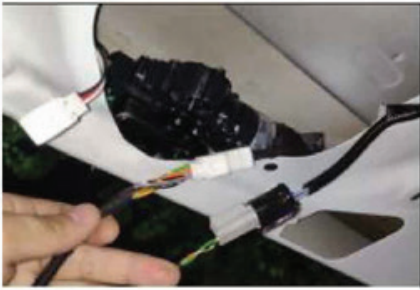


- If the key fob has a tailgate open button, press this and close the tailgate. If don't have, you need to press the unlock button 3 times to open and close the tailgate.






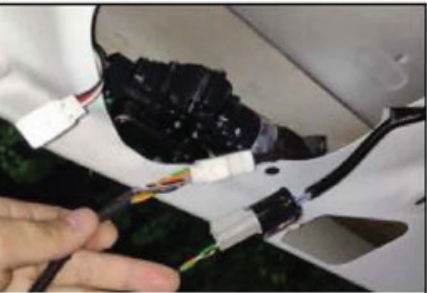


Wiring Diagram







Installation Instruction

			
<p>1. 2013+RAV4 car appearance</p>	<p>2. Remove the tailgate middle trim panel</p>	<p>3. Remove the left and right tailgate trim panel</p>	<p>4. Remove the tailgate main trim panel</p>
			
<p>5. Pry the gas spring snap ring and remove the original car gas spring (Same left and right)</p>	<p>6. Remove the original car body bracket (same left and right)</p>	<p>7. Install our body bracket ("L" left and "R" right)</p>	<p>8. Install our electric pole ("L" left and "R" right)</p>


			
<p>9. Remove the original rubber stopper (same left and right)</p>	<p>10. Cut off the marked positions in the picture (left and right are the same)</p>	<p>11. Thread our struts wire into the reserved hole and plug the rubber (same left and right)</p>	<p>12. struts wire diagram (same on both sides)</p>
			
<p>13. Remove the original car lock and install our upper suction lock</p>	<p>14. Unplug the original car lock plug with our plug</p>	<p>15. Unplug the original rear door button(buckle) plug and connect it to our plug</p>	<p>16. Find the original vehicle GND position on the left side of the trunk</p>

			
<p>9. Remove the original rubber stopper (same left and right)</p>	<p>10. Cut off the marked positions in the picture (left and right are the same)</p>	<p>11. Thread our struts wire into the reserved hole and plug the rubber (same left and right)</p>	<p>12. struts wire diagram (same on both sides)</p>
			
<p>13. Remove the original car lock and install our upper suction lock</p>	<p>14. Unplug the original car lock plug with our plug</p>	<p>15. Unplug the original rear door button(buckle) plug and connect it to our plug</p>	<p>16. Find the original vehicle GND position on the left side of the trunk</p>

<p>17. GND position</p>	<p>18. Remove the reserved button of the original car button, install our front button</p>	<p>19. Find the fuse box under the main driver and get regular electricity in the fuse box</p>	<p>20. Fuse definition diagram</p>
<p>21. Find the key unlock signal at the B-pillar position in the figure</p>	<p>22. Our yellow wire is connected to the Medium gray wire in the B pillar of the original car</p>	<p>23. Wiring diagram (blue is the power line, orange is the front button line, yellow is the unlock signal line)</p>	<p>24. Thread the wiring harness of the control box into the corrugated pipe</p>


			
<p>25. Route the control box wiring harness towards the tailgate</p>	<p>26. Connect the corresponding wiring harness to the control box and fix the control box</p>	<p>27. Remove the original car handle box and install our rear button</p>	<p>28. Restore all trim panels. After the installation is complete, close the door manually to initialize the system.</p>

After the installation is completed, you must set the tailgate learning. Make sure that the door can be opened and closed in place. (Raise the tailgate to ideal height. Then press the tailgate button for 3-5 seconds. You will hear a sound “Deep——” and then loose your hand. Press the tailgate button again and close it. You will hear a sound again “Deep”. Tail gate learning is finished.

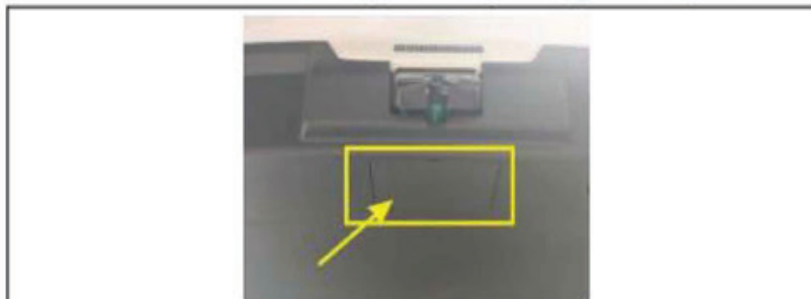

When the tailgate cannot be opened normally, find the original car emergency safety lock in the trunk, open the emergency cover and pull the emergency switch to open.

Check the points before the trim panel is restored

-  **After the installation is completed, please check:**
1. Are all screws replaced with special screws?
 2. Is the socket inserted?
 3. Does the electric suction lock work?
 4. Whether the harness is damaged or pinched during routing process.
 5. Whether the remote control and the front switch can open or close the tailgate.

Function Description

After turning on, the door must be closed manually and the function can be used normally.

Note: Do not use screwdriver or other tools to lock the secondary lock as a door closing, otherwise a series of problems such as abnormal door opening and closing.

Control mode of door opening and closing

- (1) Remote control door opening and closing: Press the remote control unlock key 3 times (some models press the trunk key for a long time) to control the trunk.
Note: When pressing the unlock key, press 3 times at a constant speed within 4 seconds.
- (2) The original driver of the trunk picks the key: Control the opening and closing of the trunk.
Note: The control mode is the same as that before installation, and will not take effect until the vehicle is unlocked.
- (3) Front key/central control unlock key: Press the front key for about 15s to control the opening and

closing of the trunk; If the front key is not installed, press the central control unlock key of the original car 3 times to control the opening and closing of the trunk.

Note: The function of opening the trunk by the front key will only take effect in the state of flameout or P gear, and the function of closing the trunk will take effect at any time. The functions of opening and closing the trunk by the central control unlock key will only take effect under the flameout state.

(4) Trunk rear button: Press to control the trunk to close.

Anti-pinch function

In the process of opening and closing the door, if obstructions are encountered, the trunk will immediately stop to avoid accidents.

Buzzer reminder

(During the process of opening and closing the trunk, there are corresponding sound reminders at different stages. When the electric absorption is abnormal, the buzzer will give an alarm)

A. After the electro-suction lock is completed, the beeper will "beep" four times quickly, indicating that the electro-suction is normally locked in place at the secondary level.

B. After the completion of the electro-suction, the buzzer does not sound, indicating that the electro-suction is normal and the secondary lock is not in place.

C. After the electro-suction or spit out, hear a long cry of the buzzer for about 10 seconds, indicating the electro-suction failure (it may be that the electro-suction is stuck or not in good contact).

Electro-suction function

In the process of closing the trunk, it has the characteristics of stable speed, low sound and the like, so that the user experience is more comfortable.

Height setting function

The rear key adjusts the opening height of the trunk: When opening the door, manually adjust the trunk to the ideal height. Press the rear key for a long time and release it after hearing a long sound of the

	<p>buzzer. The memory of the trunk height is successful. The trunk will open to this position next time.</p> <p>Note: The set height cannot exceed the preset height, otherwise it may cause the door to be unable to open and close normally.</p>
--	---

COMMON PROBLEMS

<p>A. Bracket installing reverse: The trunk door will not be closed properly.</p>
<p>B. The bracket screws are not replaced as required: The trunk door will not closed properly and the struts will be damaged.</p>
<p>C. The control box connector is not inserted into the correct position or is loose: Anti-pinch pressure sensor is not sensitive.</p>
<p>D. Strut ball head and compression springs are not installed properly: Strut will fall off during us (check it after installation).</p>
<p>E. The connector is not inserted into the correct position or is loose: Functional failure.</p>
<p>F. The electric suction lock and the lock cannot be deviated, otherwise the door will not be closed and the door gap is too large, resulting in a loud sound.</p>
<p>G. The car has not been started for a long time, resulting in low power: When the door is opening and closing, the electric tailgate does not work properly and it is necessary to restart the engine.</p>
<p>H. Installing more than 5kg of soundproof cotton on the tailgate, it will affect the switch gate force and need the controller to increase the force.</p>
<p>I. First installation: Press the tailgate closing button for 3-5 seconds to hear a long beep—, then press it again to hear 2 sound " Deep Deep". Finally, the installation is successful. (If there is no such operation, the electric tailgate will be abnormal when it is running.)</p>

Fault Phenomenon	Troubleshooting Method
The original key fob does not work	Check if the yellow central control wire is connected.

Not work after installation	<ol style="list-style-type: none"> 1. Check if the positive power supply is connected with 12V-16V. 2. Check if the power fuse is inserted. 3. Check if the ground wire is connected.
Closing the tailgate not in place	<ol style="list-style-type: none"> 1. Check if the left and right bracket are installed reversed. 2. Check if the control box wire is inserted. 3. Check if the brackets are fixed with our screws. 4. There are two rubbers on the left and right sides of the original tailgate cover. Check if they are loose and need to tightened.
The original car key fob does not work	Is there any learning after installing? You need to press the tailgate switch button to learn.
The tailgate can only open to half	<ol style="list-style-type: none"> 1. Check if the left and right bracket are installed reversed. 2. Check if the control box wire is inserted. 3. Check if the brackets are fixed with our screws.



Anti-Pinch Function:

When the obstacle is directly below the tailgate, it will bounce back in the opposite direction when it hits the obstacle.

Note: When the door is closed, the anti-clamping force on both sides of the strut is heavy. Do not try the side anti-clip. We are not be responsible for injury.